


# Installation Instructions



**Using standard carriage bolt, install Pyranut #1 finger tight.**

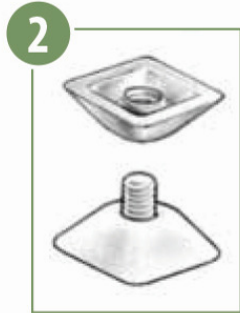

**Pyranut #2 is installed as shown, so it's a half turn away from #1.**



**Pyranut #1 is tightened or loosened by inserting an open-ended or adjustable wrench between the two nuts, then turning both nuts.**



**When tight remove Pyranut #2 leaving your property secured.**